




ADAPTIVE VEST SYSTEM™ (AVS)

CUSTOMIZATION KIT INSTALLATION INSTRUCTIONS

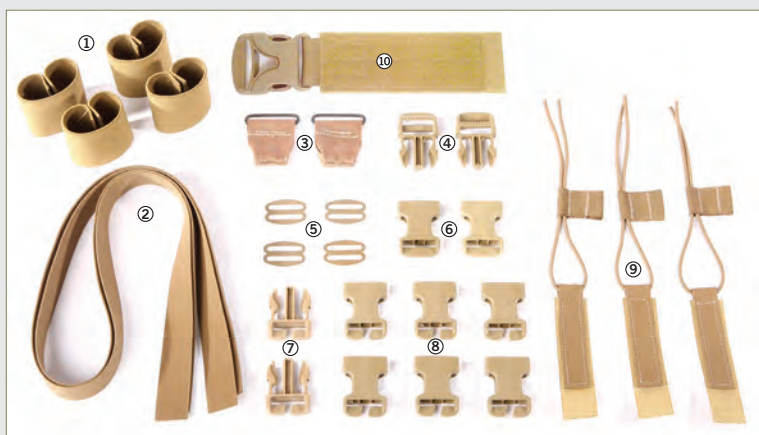

AVS™ CUSTOMIZATION KIT CONTENTS

ITEM	QUANTITY
① 2" elastic retainer bands	4
② 1" webbing strap (26")	2
③ 1.5" buckle attachment loop	2
④ 1" male SR adjustable	2
⑤ 1" metal 3-bar tri-glide	4
⑥ 1" female SR non-adjustable	2
⑦ 1" male SR quick attach	2
⑧ 1" female SR quick attach	6
⑨ 1" mag retention bungee/strap	3
⑩ Replacement shoulder strap	1


MAKING AVS™ READY FOR ATTACHING A CHEST RIG



1 Attach male (or female) quick attach buckles to 1.5" buckle attachment loops.



2 Unbuckle shoulder buckle on AVS™. Detach front platebag attachment strap from inner face of front platebag. Remove 1.5" male buckle from platebag strap and set aside.

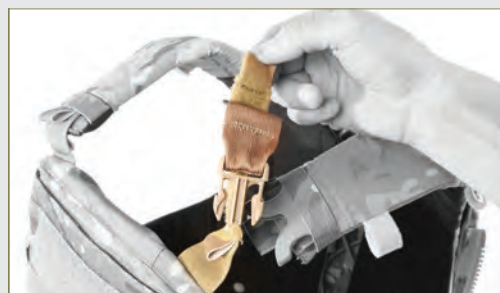

3 Fold platebag attachment strap in half lengthwise to slide ring of 1.5" buckle attachment loop over strap towards platebag so buckle is facing outward.



4 Replace 1.5" male platebag buckle onto strap. Buckle will sit on top of attachment strap. Reattach platebag strap to inner face of front platebag.



5 Detach opposite side platebag strap from shoulder. Fold platebag attachment strap in half lengthwise and slide ring of other 1.5" buckle attachment loop over strap towards platebag so buckle is facing outward. Reattach platebag strap to shoulder.



6 Completed installation of chest rig buckles shown. Note: If your chest rig connects female buckles, replace male buckles with female SR quick attach buckles included with kit.

ATTACHING ADJUSTABLE SIDE STRAPS TO AVS™ DETACHABLE FLAPS (MOLLE OR M4)



1 Attach male (or female) quick attach buckles to 1.5" buckle attachment loops.



2 Route one end of webbing strap through tri-glide and middle loop on rear harness. Return through tri-glide. Route other end through male adjustable buckle.



3 Make any adjustments in length of strap and cut and/or stow any excess webbing. Repeat for other side.

MAKING AVS™ READY FOR REAR SHOULDER PACK ATTACHMENT



1 Attach female quick attach buckles to loops on back shoulder.



2 Repeat for other side. Completed installation shown.

REPLACING SHOULDER COVERS WITH ELASTIC RETAINER BANDS




1 Detach shoulders from front plate bag. Remove shoulder covers from AVS™. Slide both elastic loops over arms.



2 Repeat for other side. Completed installation shown.

REPLACING MAG POCKETS WITH MAG RETENTION BUNGEEES/STRAPS ON AVS™ DETACHABLE FLAP, M4

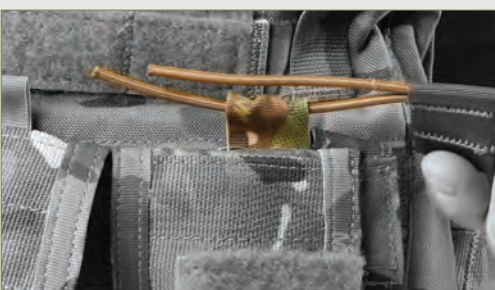

1 Tuck in front mag flaps. Route bungee through back loop on panel.



2 Tie knot in end of bungee cord.



3 Place 1" hook attachment strap on front of mag pocket Velcro® loop.