



**CRYE PRECISION**

## **FRAG POUCH**



P/N: SPS-013

© CRYE PRECISION LLC. ALL RIGHTS RESERVED.  
MADE IN THE U.S. FROM U.S. MATERIALS  
[WWW.CRYEPRECISION.COM](http://WWW.CRYEPRECISION.COM)

# INSTALLATION INSTRUCTIONS

## MOLLE ATTACHMENT



**1** Pass end of attaching strap tabs through top row of PALS on platform.



**2** Extend attaching straps so pouch is pulled tight against platform, pass attaching strap tabs through top bar on pouch, continue weaving until last row of PALS in engaged.



**3** Pass attaching strap tabs through bottom bar on pouch, fold tab back on itself and tuck behind bottom PALS row.


## BELT MOUNT



**1** Secure attaching strap tabs through the webbing on the back of the pouch.



**2** Locate belt sleeve on the back of the pouch.

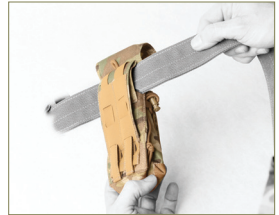

**3** Pass belt through sleeve and slide to desired location.