



**CRYE PRECISION**

## **GP POUCH 9x7x3**



P/N: SPS-069

© CRYE PRECISION LLC. ALL RIGHTS RESERVED.

MADE IN THE U.S. FROM U.S. MATERIALS

[WWW.CRYEPRECISION.COM](http://WWW.CRYEPRECISION.COM)

# INSTALLATION INSTRUCTIONS

## MOLLE ATTACHMENT



- 1 Pass end of attaching strap tabs through top row of PALS on platform.



- 2 Extend attaching straps so pouch is pulled tight against platform, pass attaching strap tabs through top bar on pouch, continue weaving until last row of PALS in engaged.



- 3 Pass attaching strap tabs through bottom bar on pouch, fold tab back on itself and tuck behind bottom PALS row.

## AVS™ HARNESS ARM ATTACHMENT



- 1 Locate AVS™ Arm sleeve on back of pouch, separate Velcro.



- 2 Pass the AVS™ Arm through the sleeve on the back of the pouch.



- 3 Place in desired location, press hook firmly against loop portion of AVS™ Arm to secure in place.


## BELT MOUNT



- 1 Secure attaching strap tabs through the webbing on the back of the pouch.



- 2 Locate belt sleeve on the back of the pouch.

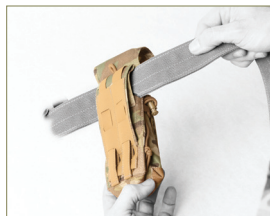

- 3 Pass belt through sleeve and slide to desired location.