



CRYE PRECISION

GP POUCH 11x6x4



P/N: SPS-071
© CRYE PRECISION LLC. ALL RIGHTS RESERVED.
MADE IN THE U.S. FROM U.S. MATERIALS
WWW.CRYEPRECISION.COM

INSTALLATION INSTRUCTIONS

MOLLE ATTACHMENT



1 Pass end of attaching strap tabs through top row of PALS on platform.



2 Extend attaching straps so pouch is pulled tight against platform. Pass attaching strap tabs through top bar on pouch and continue weaving until last row of PALS in engaged.



3 Pass attaching strap tabs through bottom bar on pouch. Fold tab back on itself and tuck behind bottom PALS row.

AVS™ HARNESS ARM ATTACHMENT



1 Locate AVS™ Arm sleeve on back of pouch, separate Velcro®.



2 Pass the AVS™ Arm through the sleeve on the back of the pouch.



3 Place in desired location, press hook firmly against loop portion of AVS™ Arm to secure in place.


BELT MOUNT



1 Secure attaching strap tabs through the webbing on the back of the pouch.



2 Locate belt sleeve on the back of the pouch.

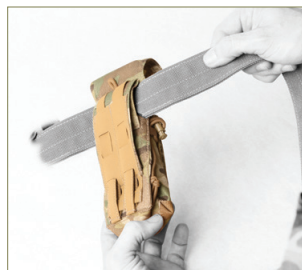


3 Pass belt through sleeve and slide to desired location.

OPTIONAL DROP LEG ATTACHMENTS

Requires GP Pouch 11x6x4 Drop Leg Mount

LEG PORTION

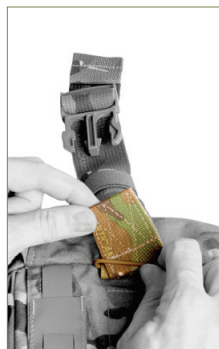


- 1 Locate leg strap channel on back of pouch, and pass female buckle through channel.
- 2 Press loop firmly against hook to secure in place at desired location.
- 3 Lay pouch front down and locate metal ring at top edge. Pass adjustable drop leg attachment tab through ring.
- 4 Feed tab through ring until end clears ring and pull strap until locked in place.
- 5 Tuck end of tab into elastic loop to secure.

DROP LEG MOLLE



- 1 Ensure MOLLE mounting straps are unsnapped. Pass all components through row 2 of PALS from the bottom.
- 2 Pass longer portion of straps behind row 1 of PALS. The shorter strap should lie in front of PALS webbing.
- 3 Secure snaps. Ensure the long straps are tucked behind PALS row 2.

DROP LEG BELT

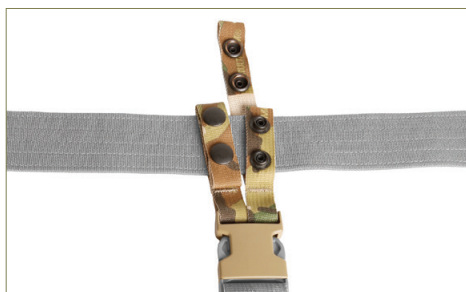

- 1 Secure snap on mounting straps, to form a loop.
- 2 Pass belt through loops and slide to desired location.