



**CRYE PRECISION**

**FB/40mm POUCH™**



**SINGLE  
POU-FB1**




**DOUBLE  
POU-FB2**



**TRIPLE  
POU-FB3**

# INSTALLATION INSTRUCTIONS

## MOLLE ATTACHMENT

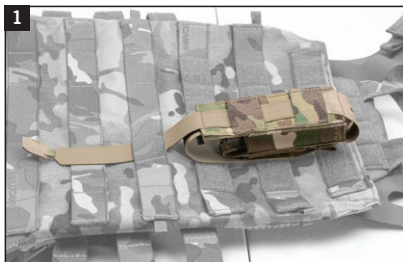

1  
Begin by sliding the tab into the row of webbing where you want the pouch to sit.



2  
Weave the tab by alternating between MOLLE rows & slots on the pouch.



3  
Continue alternating between MOLLE rows & slots on the pouch.



4  
Pull tab end



5  
Route tab end back on top and into slot opening at end.



6  
Secure top flap with secondary security tab.